

# EDGESTONE SLIDE ROCK

## Rock Panel Installation Guide



**1. Install White Water slide per installation instructions prior to attachment of the Edgestone Slide Rock panels.** Legs should be plumb and step should be set at 16 degrees slope. **IMPORTANT:** Correct step slope is critical to ensure proper fit of the Slide Rock Panels.



**2A. Front panel installation (toward pool).** Position the front panel along the slide. Make sure the panel does not extend over the pool edge. Starting at the step, make sure the panel fits correctly down the length of the flume.



**2B.** Use the relief line along step section to help with panel positioning.



**2C.** The rear of the panel has a cut out of the step to deck mounting bolt head.

**Inter-fab**  
.com

**800.737.5386**

**3050 S. ALVERNON WAY  
TUCSON, AZ 85713**

# EDGESTONE SLIDE ROCK

## Rock Panel Installation Guide - cont.




**2D.** Once the panel is in position, start at the step and work down the flume to attach the panel to the slide using a 5/16" socket or nut driver and the 3" Hex Tek zinc screws provided.



**2E.** The screws are self tapping, so no pilot holes are required. Tighten screws flush with the panel and do not over-embed.



**2F.** NOTE: Do not begin attaching with screws until the fit of the entire panel is confirmed. Attache the panel to the deck using the 3-1/4" Tapcon (blue) screws and 1/4" nylon washers provided.

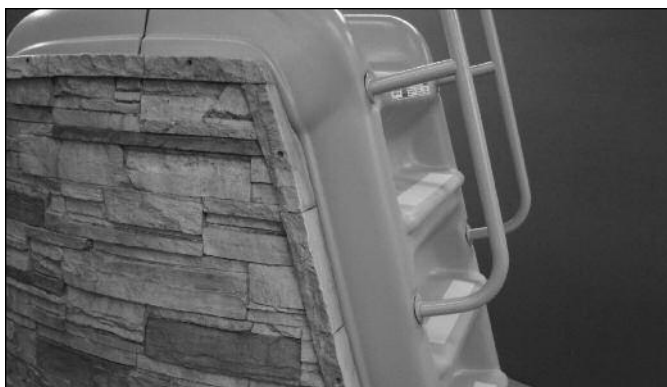

**3.** Rear panel installation (away from pool). Repeat steps for front panel installation to attach the rear panel to the slide.



**4.** Attach the underside section to both front and rear panels as shown in photo above.



**5.** Caulking cord and touch up paint are provided with the hardware kit. Use the caulking cord to cover screw heads and washers. Paint screw heads and caulk with touch up paint kit. Use a blotting motion to paint caulking.

**HARDWARE KIT:**

QTY 5 = H-1/4X3-1/4 TAP (Tapcon Hex Head Zinc)

QTY 5 = H-1/4NYLON WAS (1/4" Nylon Washer)

QTY 25 = H-SELF DRILL (#12 x 3" Hex Tek Zinc)

QTY 1 = BRUSH ACID P14 (Paint Touch Up Brush)

QTY 1 = H-CAULKING-EON (Caulking Cord)

QTY 3 or 4 = Touch Up Paint (3 or 4 Bottles; Depends on Color Ordered)

QTY 1 = 3/16" Masonry Bit (Masonry Drill Bit)



**800.737.5386**

**3050 S. ALVERNON WAY  
TUCSON, AZ 85713**