


15' GARDEN RIDE SLIDE Assembly & Installation Instructions

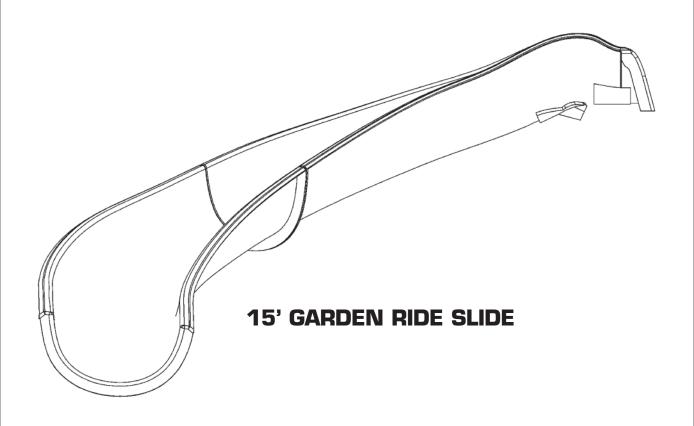

3050 S. ALVERNON WAY • TUCSON, AZ 85713 520.790.7040 • 800.737.5386 • FAX 520.790.7127

inter-fab.com

TABLE OF CONTENTS:

Intended Use Instructions	2
Water Safety Envelope	3
Slide Placement/Deck Requirements	4-5
Slide Measurements	6
Slide Components	7
Installing Landing Pads	8
Connecting Flumes	8
Connecting Handrails	9
Using Optional Support System	9
Pre-Assemble Foot Receivers	9
Attach Leg Supports to Landing Pads	10
Place Slide in Position	10-11
On-Deck Installation	11
In-Deck Installation	12
Attach Water Supply	12
Slide Care & Maintenance	13
Inter-Fab Limited Warranty	14

INTENDED USE INSTRUCTIONS

- 1. Everyone who uses this slide must know, understand and follow these instructions
- 2. The ANSI/NSPI-4 2007 standard for above ground pools prohibits the use of slides or diving boards on above ground pools.
- 3. This slide should never be installed on above ground pools, ponds, floating docks or platforms, boat docks or houseboats or any natural body of water.
- 4. Be familiar with the shape and depth of the pool before you slide. This slide should only be used with the proper water safety envelope, as described in Diagrams A, B & C on page 3 and in accordance with the slide positioning diagrams on pages 4.
- 5. Because the slide may only be used in water 4' deep or greater, all slide users must be able to swim in deep water.
- 6. Weight limit for this slide is 350 pounds, no slider weighing more than 350 pounds may use this slide.
- 7. The surface of the slide is very slippery when wet; **USE CAUTION** when entering the slide and when transitioning from standing to sitting.
- 8. Slide in a feet first sitting position **ONLY**.
- 9. **IMPORTANT:** sliding headfirst is prohibited: serious spinal injury resulting in paralysis or death can result.
- 10. Maintain adult supervision at all times.
- 11. Only one person at a time is allowed on the slide.
- 12. Be sure the water delivery system is on and lubricating the slide prior to use.
- 13. Collision with another swimmer or a diver can result in serious injury or death for one or both persons: Before sliding, always make sure that the path in front of the slide is free from any (including submerged) obstructions including other people or objects in the pool such as rafts, inner tubes etc. When a diving board is also present, make sure you do not use the slide while someone is on or using a diving board. Take turns.
- 14. No roughhousing or horseplay should be allowed on the slide at any time.
- 15. Do not stand, jump or dive from any part of the slide.
- 16. Do not slide on objects such as rafts or inner tubes, doing so greatly increases your risk of injury.
- 17. Do not slide through or at objects such as rafts or inner tubes, doing so greatly increases your risk of injury.
- 18. Do not use this slide if physically impaired or handicapped without your doctor's permission.
- 19. Do not use this slide with a history of heart conditions, seizures, back problems, fainting or fear of heights.
- 20. Do NOT use this slide if you are pregnant.
- 21. Do not drink alcohol and use this slide.
- 22. Don't take chances, inspect the slide at least once a year (see the slide inspection list on page 16, do not use the slide if any part becomes loose, damaged, weakened or broken. If necessary, before using the slide again, have it inspected and repaired by a competent professional familiar with pool slides.

WARNING: SERIOUS INJURY OR DEATH CAN RESULT FROM THE IMPROPER INSTALLATION OR USE OF THIS SLIDE.



When installed according to these instructions, this slide conforms to Consumer Product Safety Standard Guidelines.

ALL SLIDES SHOULD

BE GROUNDEDCheck your local electrical

codé requirements.


WATER SAFETY ENVELOPE: A minimum water depth of three feet (3') under the exit of the slide which increases to a depth of four feet (4') **DIAGRAM A** at point A which is located four feet six inches (4'6") (NOT TO SCALE) from the back wall of the pool. A minimum depth of four feet (4') must be maintained at a distance of nine feet (9') along the centerline of the slide from point A. The above described water depth profile shall extend a minimum of three feet three inches (3'3") on either side of the centerline of the slide. 20" MAX (See Diagrams A, B & C) — 6'6" — 3'3" 3'3" CENTER . 13' 6'' **WATER SAFETY** ENVELOPE 6' 6" 13'6" 2'6" **DIAGRAM B** (NOT TO SCALE) Minimum Slide Clearance Area 0 **DIAGRAM C** (NOT TO SCALE) LEVEL DECK Minimum Water Safety Envelope 20" MAX WATER LEVEL -3 4 POINT A

4' 6"

— 13' 6" —

SLIDE PLACEMENT

If the slide meets the pool edge at an angle, then the outside curve "Pivot A" has to be at the pool edge. **Refer to Diagram D & E below.**

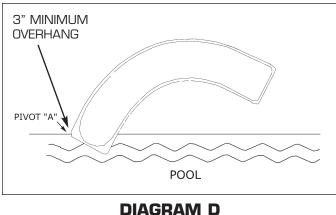


3" MINIMUM OVERHANG PIVOT "A"

DIAGRAM D (NOT TO SCALE)

DIAGRAM E (NOT TO SCALE)


If the slide meets the pool edge straight on, then the end of the exit section should be parallel with the pool edge. **Refer to the Diagram F below.**

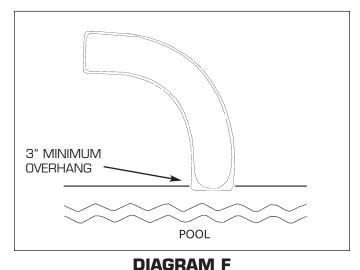


(NOT TO SCALE)


NOTE: The exit point of the flume can be no higher than 20" above the water.


MINIMUM DECK REQUIREMENTS

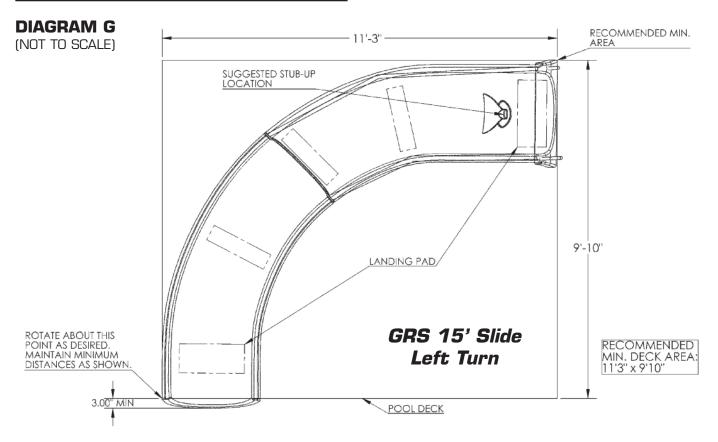

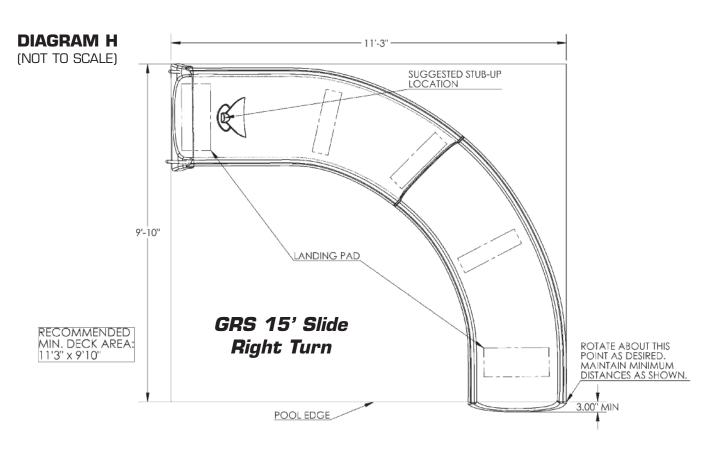


MEASUREMENTS: 15' GRS LEFT TURN

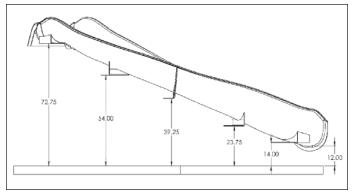

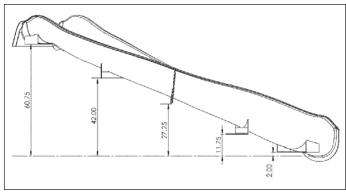


LEFT TURN WITH SUPPORTS


LEFT TURN WITHOUT SUPPORTS

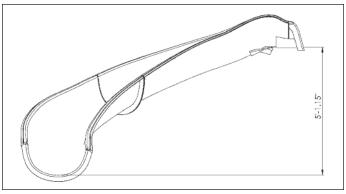

LEFT TURN HEIGHT


MEASUREMENTS: 15' GRS RIGHT TURN

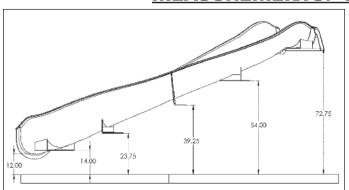

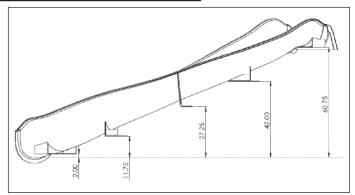

RIGHT TURN W/SUPPORTS

RIGHT TURN WITHOUT SUPPORTS

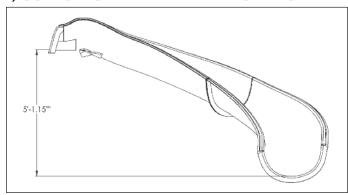

RIGHT TURN HEIGHT

SLIDE COMPONENTS:

15' Garden Ride Slide Series

Centerline Length:	194"
Starting Elevation:	73 1/8"
Flume Width:	28"
Flume Depth:	15"
Water Flow (GPM):	40
Entry Section:	1
Exit Section:	1
Handrails:	2
Entry Mid Section	
Landing Pad:	1
Exit Mid Section	
Landing Pad:	1
Flume to Flume	


1

Landing Pad:

ANCHOR COMPONENTS:

15' Optional Support System

Exit Section Support:	14"
Mid Section Exit Support:	23 ¾"
Flume to Flume Support:	39 1/4"
Mid Section Entry Support:	54"
Entry Section Support:	72 ¾"
Flanged Feet:	10
3/8 Wedge Anchors	30

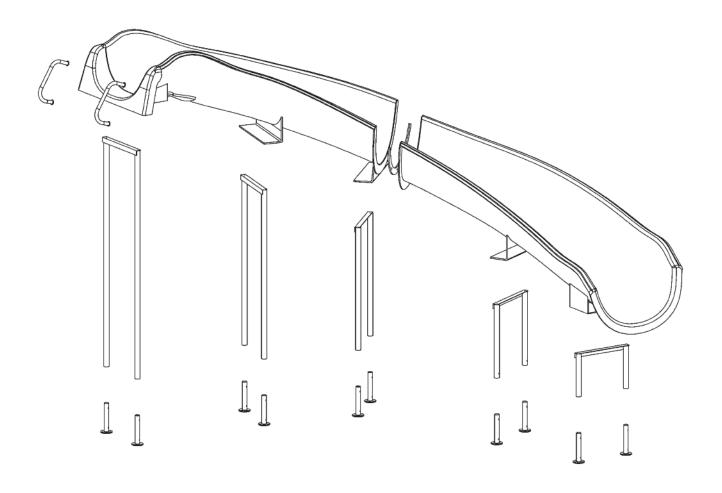

15' GARDEN RIDE SLIDE ASSEMBLY

INSTALLING LANDING PADS:

Using cardboard to place under the slide sections so as not to damage the finish; lay both the upper and lower flume sections upside down. Each flume section has a yoke support that requires attachment of a 90° Landing Pad. (See Figure 1) Install pad on the side of flange towards pool, attach the Upper and Lower Landing Pads to the Mid Section Supports (Exit and Entry) using 3/8" x 1-1/2" stainless steel bolt, flat washer, lock washer and nut. *Make sure to use the provided Anti-Seize on all hardware.*

NOTE: The two Yoke Landing Pads have four (4) attachment holes and the single Flume to Flume Landing Pad has three (3) attachment holes. (See Figure 2)

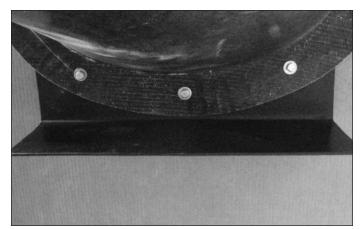




Fig. 1 Fig. 2

CONNECTING FLUMES:

Align the two flume sections and line up the Center Landing Pad along the upper flume flange, using the provided 3/8" stainless steel hardware, place a flat washer on the 3/8" x 1-3/4" bolt and push the bolt and the two flume sections and landing pad on pool side of flange, secure with the other flat washer, lock washer and nut. (See Figure 3) Make sure to use the provided Anti-Seize on all hardware. Hand tighten all seven flange bolts. With a minimum of three (3) persons, turn the slide sections over. Check that the two flumes are aligned correctly by running your hand along the sliding surface. You want to ensure a smooth transition between the two sections, adjust sections as needed. When both are aligned properly, utilizing a torque wrench, tighten each nut to approximately half of the maximum 25 ft. lbs. Tighten the bolts in an alternating fashion working from Left to Right starting with the center bolt, working your way up the flange. (See Figure 4) Tightening the bolts in this sequence is necessary to compress the gasket evenly.

Repeat the same tightening process until the specified 25 ft. lbs. is reached at each bolt. **DO NOT OVER TIGHTEN.** Using greater force may fracture the fiberglass.

CONNECTING HANDRAILS:

Install the handrails (**See Figure 5**) for the correct orientation, use the provided 3/8" x 1" stainless steel bolt, flat washer and lock washer to attach - **do not over tighten.**



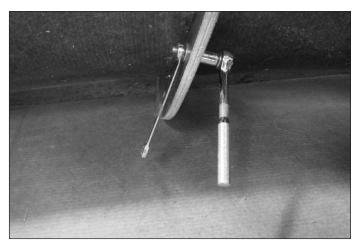


Fig. 3 Fig. 4

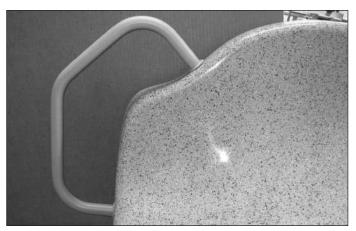


Fig. 5

INSTALLATION GUIDE FOR 15' GARDEN RIDE SLIDE USING OPTIONAL SUPPORT SYSTEM:

The GRSS Optional Support System is to be used on a flat grade concrete surface; for in-deck or on-deck installation. For a 15' GRSS (both Left and Right turn) the recommended minimum deck area: $12' 3" \times 9' 10" \times 4"$ print.

The Optional Support System is designed to easily orient the slide to ensure proper elevation starting at the entry section 73 1/8" to the exit section at 12" above the deck.

PRE-ASSEMBLE FOOT RECEIVERS:

Attach a deck anchor to each leg support with a 2 $\frac{1}{2}$ " x $\frac{1}{4}$ " stainless steel bolt, flat washer, lock washer and nut as shown. (See Figure 6) Hand tighten only.

ATTACH LEG SUPPORTS TO LANDING PADS:

While the slide is still upside down, you may attach the short legs to the Exit Section Landing Pad which is pre-drilled to accept the bracket. *Make sure to use the provided Anti-Seize on all hardware.* Place the provided 3/8" flat washer on a 3/8" x 1-1/2" stainless steel bolt, from the underside of the Exit Section Landing Pad through the stainless steel leg bracket, place a flat washer, lock washer and nut to secure. (See Figure 7) Repeat the process for the other three pre-drilled holes. Hand tighten only.

With the help of others, you will now flip the slide right side up. Have two people lift up and hold the Entry Section and attach the Entry Support Legs to the Entry Section Landing Pad. **Use Anti-Seize and Hand tighten only.** Work your way down the slide and attach all remaining Support Legs.

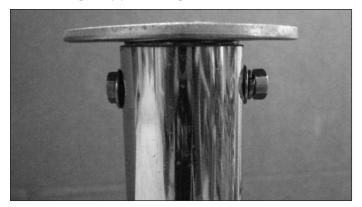




Fig. 6

Fig. 7

PLACE SLIDE IN POSITION:

Using three to four people, gently move the fully assembled slide to its correct and final position on the deck. The Exit Section should be placed so all water runs into the pool, the minimum overhang is 3". The front leg(s) cannot be positioned any closer to the water's edge than 12". (See Figures 8A & 8B)

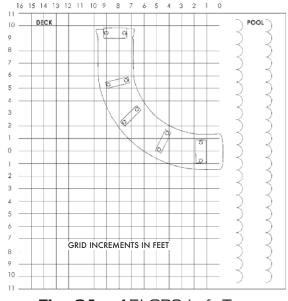


Fig. 8A – 15' GRS Left Turn

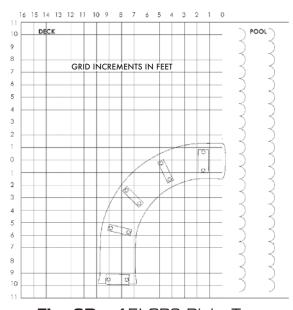


Fig. 8B – 15' GRS Right Turn

Once placement has been determined, starting from the Exit Section, align leg supports using a bubble level ensure both legs are straight (plumb). **(See Figure 9)** Hand tighten the leg supports to the Landing Pads. Work your way up the slide until all leg supports had been tightened and all legs are plumb.



Fig. 9

ON-DECK INSTALLATION:

Using the deck anchor flanges as a template, mark the locations for the anchor bolts. Gently move the slide to one side. Using a 3/8" masonry drill bit and a hammer drill, drill holes 1-3/4" – 2" deep, make sure you drill to the correct depth and make sure not to drill all the way through the deck. Clean debris from holes using a shop vacuum or garden hose. Reposition the slide and align the anchor flanges to the holes. Place a 3/8" wedge anchor through the anchor flange into each hole, and gently hammer the bolt into the deck leaving 3/4" – 1" of the bolt above the anchor flange – make sure the anchor go in straight. Put anti-seize on the wedge anchor, then the flat washer, lock washer and nut. Secure the nuts on the bolts but do not over tighten. **(See Figure 10)**

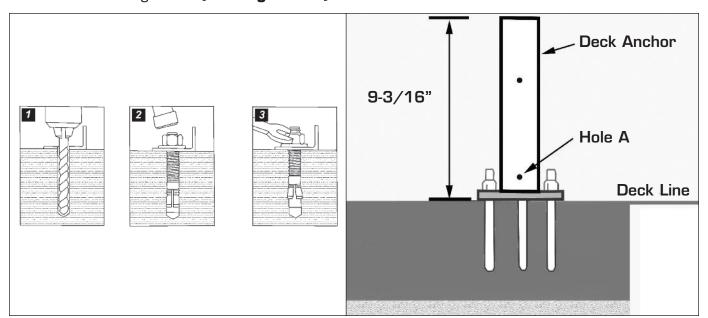


Fig. 10

FINAL TIGHTENING OF ALL CONNECTIONS:

Tighten the $\frac{1}{4}$ " bolts from Leg to Deck Anchor. Move to the bottom of the slide and tighten all Leg Supports to their Landing Pads.

IN-DECK INSTALLATION:

Attach slide legs to the higher of the 2 bolt holes on the deck anchor "hole B", make a mark with a marking pen or duct tape 4-1/4" from the bottom of the deck anchor, shim the legs so the mark you made on the deck anchor is flush with the finished deck, using a bubble level ensure the legs are plumb. Pour concrete to secure legs, ensure the proper footing depth is maintained under the deck anchor. **(See Figure 11)**

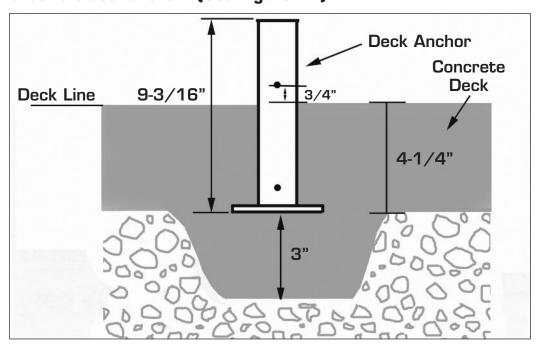


Fig. 11

ATTACH WATER SUPPLY TO SLIDE:

Your Garden Ride Slide is equipped with a 1" Female Slip adapter. A dedicated 1 ½" water stub up should be plumbed to your slide location. We recommend you plumb the slide with 1" PVC flex hose using a reducer to connect to the stub up.

Glue and slip the 1" PVC flex hose into the 1" female fitting on the underside of the Entry Section. (See Figure 12) Use PVC primer and glue (not included) as required. A ball valve is recommended to allow the water flow to be adjusted.



Fig. 12

GARDEN RIDE SERIES™ SLIDE CARE & MAINTENANCE:

Your Garden Ride slide requires periodic maintenance to keep it looking like new and protected from the elements.

- Wash slide monthly or more frequently if needed using a mild soap and soft cloth.
 Keep cleaning materials from entering pool.
 - Do not use abrasive cleaners, bleaches, chorines, high alkaline or strong acidic cleaners.
 - Do not use steel wool, wire brushes, metal scrapers, Scotch Brite or other abrasive sponge pads.
- Keeping your slide's gel coat finish coated with was starting when the slide is new –
 is the best way to prolong its life.
 - Choose a wax intended for use on gel coat surfaces. Preferably one designed for use in a Marine environment.
 - Test product on small inconspicuous section of slide prior to full application.
 - While application instructions will vary between brands of wax, in general you apply the wax with a cloth or foam pad using circular motion. Once wax dries to a haze, buff the excess with a soft dry cloth.
 - Routine waxing (at least twice a year) will maintain the smooth reflective surface of your slide.

LIMITED WARRANTY

GARDEN RIDE SERIES SLIDES™ (GRS7/GRS10/GRS15) One (1) Year Limited Warranty

WHAT IS COVERED BY THIS WARRANTY?

Inter-Fab, Inc. warrants all products it manufactures to be free from defects in materials and factory workmanship for a period of 12 months. This warranty extends to the original retail owner and begins from the date of retail purchase and is not enforceable by any other party.

This warranty is contingent upon the proper use and care of the equipment, and does not cover equipment that has been modified or has been subjected to abusive physical or environmental stresses. Inter-Fab agrees to repair or replace, at its sole discretion, any product that fails to perform as specified. This warranty relates only to defects in materials and workmanship and does not include damage or failure resulting from other causes, including, but not limited to acts of God, misuse or abuse, accident or negligence, fire, improper installation or ice damage. This warranty does not apply to fading of materials, microbiological staining and rust or corrosion of any metallic parts. Refer to Garden Ride Slide Series™ Care and Maintenance instructions for regular maintenance and cleaning. In the event that products are altered or repaired by anyone without the prior written approval of Inter-Fab, all warranties are voided.

WHAT IS NOT COVERED BY THIS WARRANTY?

Normal wear and tear, chemical damage, discoloration, misuse and any physical damage are not included in this warranty. Inter-Fab, Inc. shall not be responsible for the cost of removal or replacement of any defective product, nor for any other expenses such as loss of time, inconvenience, incidental expenses, telephone calls, labor, material charges, or travel incurred in connection with the removal or replacement of such product.

Inter-Fab, Inc. offers a support and anchor system (Garden Ride Slide Optional Support System™) for the Garden Ride Slide Series™ which is sold separately. Inter-Fab recommends that anyone installing a Garden Ride Slide Series™ slide use this anchor and support system to help ensure proper installation of the slide. Inter-Fab does not warrant installations of Garden Ride Slide Series™ slides installed without the Garden Ride Slide Optional Support System™ and disclaims any liability resulting from such installations. The pool owner shall look solely to the installer for resolution of any issues arising as a result of installations not utilizing the Garden Ride Slide Optional Support System™.

HOW TO MAKE A WARRANTY CLAIM:

Contact Inter-Fab, Inc. 3050 S Alvernon Way, Tucson, AZ 85713 (800) 737-5386

Your Rights Under State Law: This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state. Inter-Fab, Inc disclaims all liability for damage during transportation, for incidental, special or consequential damage of whatever nature, for damage due to handling, installation, or improper operation, or for damage caused by circumstances beyond Inter-Fab's control; in no event shall recovery of any kind against Inter-Fab, Inc be greater in amount than the purchase price of the equipment sold by Inter-Fab, Inc. that caused alleged damage. Inter-Fab, Inc. makes no warranties either expressed or implied, including any warranty of merchantability or fitness for particular purpose, other than these stated. Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the above exclusions may not apply to you. No representative has authority to change or modify this warranty in any respect.



3050 S. ALVERNON WAY • TUCSON, AZ 85713 520.790.7040 • 800.737.5386 • FAX 520.790.7127 • INTER-FAB.COM